

Technical data sheet and product guideline

RH2BX

Extra Black rhodium for bath plating 2 g/l ready-to-use



Color coordinates



L	55
a	-0.1
b	0
c	0.2

Product form

Metal concentration	2g/l (Rh)
Form	Liquid
Material color	Dark red
Storage time	2 years
Format	Ready to use
Chemical type	Acidic
Volume	1 liter

Operating data

	Range	Optimal
Voltage (V)	2.4-3	2.7
Current density (A/dm ²)	2-2,5	2
Working temperature (°C)	25-35	30
Exposure time (sec)	60-180	120
Cathode efficiency (mg/Amin)	6-8	7
Anode/cathode ratio	1:1-4:1	2:1
Anode type	Platonized titanium	
Agitation	Moderate	

Metal concentration

Metal	Range (g/l)	Optimal (g/l)
Rhodium	0.6-5.0	2.0

Deposit data

Hardness (HV 0,01)	700
Density (g/cm ³)	11.2
Thickness (um)	0.02-0.4
Appearance	Shiny
Color	Dark black

Preparation

RH2BX is a ready-to-use galvanic bath at the concentration of 2 g/l. No preparation is required.

Technical data sheet and product guideline

RH2BX

Extra Black rhodium for bath plating 2 g/l ready-to-use



Equipment

Working vessel: Pyrex glass / PVC / polypropylene.

Power supply: DC current rectifier with low residual AC (<5%).

Heating element.


Anode Type Platinized Titanium [1.5-2.5 µm].

For larger bath volumes:

Magnetic driven filter pumps with 5-15 µm cartridge (before use, boil and wash the cartridges with demineralized water for 3 hours to prevent organic contamination).

Amp/min counter.

Pre treatment Cleansing procedure

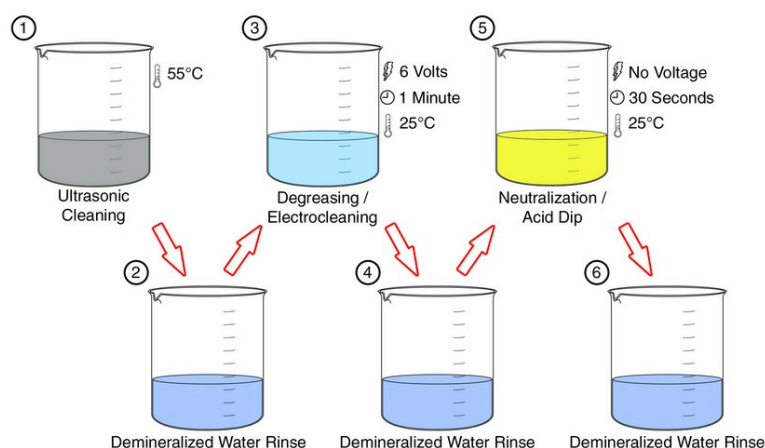

Bath maintenance

Small-sized RH2B (until 5 liters) can be used until the rhodium solution is completely exhausted without adding any rhodium concentrate replenisher solution.

For larger volumes add RH2RBX replenisher solution to restore the optimal rhodium concentration. For perfect electrolyte performance it is advisable to maintain the rhodium concentration at values not lower than 80% of the initial concentration; for example, with a bath operating at a concentration of 2 g/l, additions should be done after a consumption of 0.4 g/l of rhodium. Keep in mind that at optimum conditions a bath working at 2 g/l deposits about 8-10 mg of Rh per ampere-minute. Given the cost of rhodium and to have a precise evaluation of the metal consumption it is advisable to perform periodic analytical checks.

ALWAYS USE RH2RBX REPLENISHER SOLUTION TO RESOTRE THE RHODIUM CONTENT.

Technical data sheet and product guideline

RH2BX

Extra Black rhodium for bath plating 2 g/l ready-to-use



Post treatment

The electrolyte should be removed from the surface as quick as possible. Wash off the bath residual in a recovery rinse (still rinse). Rinse the parts in circulating deionized water and dry.

Water purity

To prevent contamination of the bath both during its preparation and any subsequent replenishing operations, use demineralized water with a conductivity of less than 3 μ S/cm (containing no traces of organic compounds, Chlorine, Silicon, or Boron).

Safety information

Being an acidic solution, the electrolyte is corrosive therefore is an irritant to the skin, eyes and mucous membranes. Caution should be exercised when using the product, avoiding contact with the eyes and skin. Use gloves and safety goggles. Keep away from cyanide based chemicals. For further information please refer to the relative MSDS.

Supplementary Information

Free sulfuric acid concentration has to stay close to 20 g/l.

The solution may presents dust in the bottom of the bottle. This does not affect the quality of the product.

It is advisable to **shake the bottle before using**.

Disclaimer

All recommendations and suggestions in this bulletin concerning the use of our products are based upon tests and data believed to be reliable. Since the actual use by others is beyond our control, no guarantee expressed or implied, is made by Legor Group, its subsidiaries or distributors, as to the effects of such use or results to be obtained, nor is any information to be construed as a recommendation to infringe any patent.